

Key NO.	Parts No.	Parts name	Key NO.	Parts No.	Parts name
1	2E2-089-01	A26M-045 SCREW	43	2C2-063-01	WORM SHAFT BUSH B
2	2F6-043-02	ROTOR NUT HOLDING PLATE	44	2F5-325-02	BODY FRONT COVER
3	2E3-075-01	HANDLE NUT	45	2E1-061-01	A30-415 SCREW
4	2YH-227-02	HANDLE TOTAL ASSEMBLY	46	2YR-064-02	LINE GUIDE ASSEMBLY
5	2W2-058-01	KEY WASHER	47	2M5-006-01	LINE GUIDE PIN
6	2E4-018-01	RETAINER	48	2W1-100-01	020-068 WASHER
7	2F8-050-01	CLICK LEAF SPRING HOLDER	49	2E3-028-01	LINE GUIDE NUT
8	2L3-029-01	CLICK LEAF SPRING	50	2P4-007-01	OSCILLATING SLIDER PIN
9	2D4-008-02	STAR DRAG LEVER	51	2C4-009-01	LEVEL WIND GUARD
10	2Q1-052-01	STAR DRAG SPRING	52	2C2-062-01	WORM SHAFT BUSH A
11	2E3-029-01	STAR DRAG NUT	53	2W1-079-01	040-070 WASHER
12	2L1-004-01	SPRING WASHER	54	2E5-013-01	E3.0 RETAINER
13	2C1-114-01	COLLAR	55	2B1-132-05	BODY
14	2F5-324-13	RIGHT SIDE COVER	56	2E1-052-01	A20-130 SCREW
15	2E3-024-01	CAST CONTROL NUT	57	2YT-426-01	SPOOL TOTAL ASSEMBLY
16	2W5-026-01	SPACER	58	2D3-061-01	BUFFER
17	2W5-029-01	CAST CONTROL SPACER	59	2C2-107-01	BRAKE COLLAR
18	2E4-019-01	BEARING RETAINER	60	2C4-021-02	CASTING BAR GUIDE A
19	2Z1-029-05	408-3 BALL BEARING	61	2YF-131-03	CASTING BAR ASSEMBLY
20	2E9-005-01	O RING	62	2E2-068-02	F20M-065 SCREW
21	2YZ-007-01	ONE-WAY CLUTCH BEARING ASSEMBLY	63	2C4-022-02	CASTING BAR GUIDE B
22	2A4-022-01	ONE-WAY CLUTCH INNER TUBE	64	2Z1-010-05	812-3.5 BALL BEARING
23	2W2-018-01	KEY WASHER	65	2A2-085-01	CLUTCH CAM ASSEMBLY
24	2W1-064-01	082-230 WASHER	66	2Q3-063-01	CLUTCH PAWL SPRING
25	2W3-009-01	EARED WASHER	67	2A4-036-01	CLUTCH PAWL
26	2W1-065-01	125-250 WASHER	68	2F8-042-01	CLUTCH CAM RETAINER
27	2W2-017-01	KEY WASHER	69	2A2-043-01	PINION YOKE
28	2G1-031-01	DRIVE GEAR	70	2Q1-031-01	YOKE SPRING
29	2W1-083-01	103-200 WASHER	71	2G2-047-01	PINION GEAR
30	2A3-021-01	RATCHET	72	2F5-327-02	LOCKER NUT
31	2M3-116-01	DRIVE SHAFT	73	2Q1-098-01	SPRING
32	2G3-027-01	IDLE GEAR	74	2F7-008-08	COVER LOCKER
33	2W1-075-01	051-100 WASHER	75	2F5-326-12	LEFT SIDE COVER
34	2E2-044-01	A20M-050 SCREW	76	2L3-040-01	CLICK LEAF SPRING
35	2F6-036-01	DRIVE SHAFT RETAINER	77	2YF-160-01	CENTRIFUGAL DRAG SET ASSEMBLY
36	2Z1-001-05	508-2.5 BALL BEARING	78	2E1-068-01	F30-100 SCREW
37	2W1-124-01	045-065 WASHER	79	2W5-079-01	CAST CONTROL SPACER
38	2E5-006-01	E2.5 RETAINER	80	2W5-078-01	SPACER
39	2YM-026-01	WORM SHAFT ASSEMBLY	81	2Z1-015-02	310-4 BALL BEARING
40	2C1-055-01	SPACER	82	2E4-011-01	BEARING RETAINER
41	2W5-041-01	SPACER	83	2X3-004-02	WRECH
42	2E2-050-01	A20M-035 SCREW			




BAIT CASTING REEL

BASS COLLECTOR SERIES

CS101H

alle best-nr. angeben (nicht key-nr.)
Veuillez indiquer le numero de la piece (Non "key" no.)

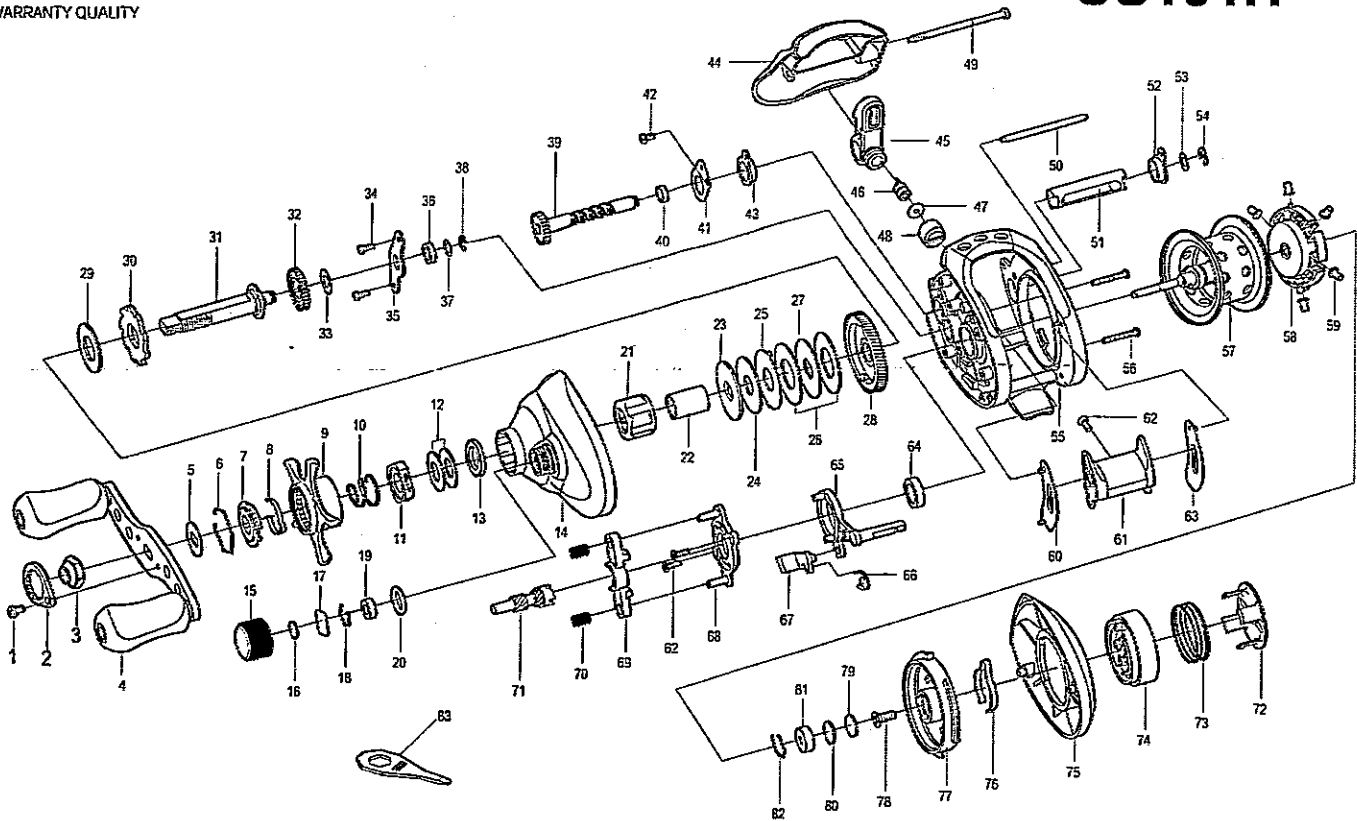

Key NO.	Parts No.	Parts name	Key NO.	Parts No.	Parts name
1	2E2-089-01	A26M-045 SCREW	43	2C2-063-01	WORM SHAFT BUSH B
2	2F6-043-02	ROTOR NUT HOLDING PLATE	44	2F5-357-02	BODY FRONT COVER
3	2E3-075-02	HANDLE NUT	45	2YR-064-02	LINE GUIDE ASSEMBLY
4	2YH-313-02	HANDLE TOTAL ASSEMBLY	46	2M5-006-01	LINE GUIDE PIN
5	2W2-058-01	KEY WASH	47	2W1-100-01	020-068 WASHER
6	2E4-018-01	RETAINER	48	2E3-028-01	LINE GUIDE NUT
7	2F8-050-01	CLICK LEAF SPRING HOLDER	49	2E1-061-01	A30-415 SCREW
8	2L3-029-01	CLICK LEAF SPRING	50	2P4-007-01	OSCILLATING SLIDER PIN
9	2D4-008-02	STAR DRAG LEVER	51	2C4-009-01	LEVEL WIND GUARD
10	2Q1-052-01	STAR DRAG SPRING	52	2C2-062-01	WORM SHAFT BUSH A
11	2E3-029-02	STAR DRAG NUT	53	2W1-079-01	040-070 WASHER
12	2L1-004-01	SPRING WASHER	54	2E5-013-01	E3.0 RETAINER
13	2C1-114-01	COLLAR	55	2B1-143-05	BODY
14	2F5-359-13	LEFT SIDE COVER	56	2E1-052-01	A20-130 SCREW
15	2E3-024-01	CAST CONTROL NUT	57	2YT-426-01	SPOOL TOTAL ASSEMBLY
16	2W5-026-01	SPACER	58	2D3-081-01	BUFFER
17	2W5-029-01	CAST CONTROL SPACER	59	2C2-107-01	BRAKE COLLAR
18	2E4-019-01	BEARING RETAINER	60	2C4-021-02	CASTING BAR GUIDE A
19	2Z1-029-05	408-3 BALL BEARING	61	2YF-131-03	CASTING BAR ASSEMBLY
20	2E9-005-01	O RING	62	2E2-068-02	F20M-065 SCREW
21	2YZ-007-01	ONE-WAY CLUTCH BEARING ASSEMBLY	63	2C4-022-02	CASTING BAR GUIDE B
22	2A4-022-01	ONE-WAY CLUTCH INNER TUBE	64	2Z1-010-05	812-3.5 BALL BEARING
23	2W2-018-01	KEY WASHER	65	2A2-089-01	CLUTCH CAM ASSEMBLY
24	2W1-064-01	082-230 WASHER	66	2Q3-082-01	CLUTCH PAWL SPRING
25	2W3-009-01	EARED WASHER	67	2A4-041-01	CLUTCH PAWL
26	2W1-065-01	125-250 WASHER	68	2F8-051-01	CLUTCH CAM RETAINER
27	2W2-017-01	KEY WASHER	69	2A2-054-01	PINION YOKE
28	2G1-043-01	DRIVE GEAR	70	2Q1-031-01	YOKE SPRING
29	2W1-083-01	103-200 WASHER	71	2G2-055-01	PINION GEAR
30	2A3-021-01	RATCHET	72	2F5-327-04	LOCKER NUT
31	2M3-116-02	DRIVE SHAFT	73	2Q1-098-01	SPRING
32	2G3-027-01	IDLE GEAR	74	2F7-008-08	COVER LOCKER
33	2W1-075-01	051-100 WASHER	75	2F5-358-12	RIGHT SIDE COVER
34	2E2-044-01	A20M-050 SCREW	76	2L3-040-01	CLICK LEAF SPRING
35	2F6-036-01	DRIVE SHAFT RETAINER	77	2YF-160-01	CENTRIFUGAL DRAG SET ASSEMBLY
36	2Z1-001-05	508-2.5 BALL BEARING	78	2E1-068-01	F30-100 SCREW
37	2W1-124-01	045-065 WASHER	79	2W5-079-01	CAST CONTROL SPACER
38	2E5-006-01	E2.5 RETAINER	80	2W5-078-01	SPACER
39	2YM-026-01	WORM SHAFT ASSEMBLY	81	2Z1-015-02	310-4 BALL BEARING
40	2C1-055-01	SPACER	82	2E4-011-01	BEARING RETAINER
41	2W5-041-01	SPACER	83	2X3-004-02	WRECH
42	2E2-050-01	A20M-035 SCREW			