



Key NO.	Parts No.	Parts name	Key NO.	Parts No.	Parts name
1	2YD-030-15	DRAG KNOB ASSEMBLY	50	2Q3-009-01	ANTI-REVERSE SPRING
2	2E9-016-01	PROOF WATER RING	51	2A1-026-17	ANTI-REVERSE LEVER
3	2E4-009-01	DRAG WASHER RETAINER	52	2E2-013-04	B20M-060 SCREW
4	2W3-003-01	EARED WASHER	53	2L2-016-01	HIT AND RUN CLICK PAWL
5	2W2-005-01	KEY WASHER	54	2E1-050-01	A20-060 SCREW
6	2W1-052-01	050-187 WASHER	55	2Z1-023-05	814-4 BALL BEARING
7	2YT-360-02	SPOOL TOTAL ASSEMBLY	56	2G3-080-01	OSCILLATING GEAR
8	2W2-023-01	KEY WASHER	57	2M2-015-01	OSCILLATING CAM
9	2L3-018-01	CLICK LEAF SPRING	58	2M1-055-01	OSCILLATING SLIDER
10	2F8-027-01	CLICK LEAF SPRING HOLDER	59	2E5-050-01	OSCILLATING SLIDER RETAINER
11	2M3-118-01	MAIN SHAFT	60	2E2-006-03	B26M-050 SCREW
12	2W2-024-01	KEY WASHER	61	2G1-103-01	DRIVE GEAR
13	2E3-002-01	ROTOR NUT	62	2W1-035-02	080-105 WASHER
14	2E1-028-01	B26-050 SCREW	63	2L3-032-01	CONTROL KNOB CLICK LEAF SPRING
15	2Q3-108-01	BAIL SPRING	64	2Q1-091-01	CLUTCH PAWL SPRING
16	2R5-144-01	BAIL TRIP LEVER	65	2F6-106-01	CLUTCH PAWL
17	2R5-143-01	BAIL PAWL	66	2F6-107-01	CLUTCH PAWL RETAINER
18	2R4-159-02	BAIL TRIP COVER	67	2YA-028-01	HIT AND RUN LEVER SHAFT ASSEMBLY
19	2E1-016-04	B26-080 SCREW	68	2Q3-097-01	CLUTCH CAM SPINNING
20	2R1-122-02	ROTOR	69	2Q3-110-01	SPRING B
21	2E2-007-04	B30M-100 SCREW	70	2W1-178-01	081-125 WASHER
22	2R2-053-05	BAIL ARM	71	2YF-135-01	CLICK GEAR ASSEMBAL
23	2C1-034-01	LINE ROLLER COLLAR	72	2W1-179-01	045-178 WASHER
24	2Z1-012-05	407-2.5 BALL BEARING	73	2W3-028-01	EARED WASHER
25	2R6-020-02	LINE ROLLER	74	2C1-101-01	COLLAR
26	2C2-032-01	LINE ROLLER BUSH	75	2Q1-085-01	DRAG SPRING
27	2YL-130-02	BAIL ASSEMBLY	76	2D3-040-01	PRESSURE SCREW
28	2E1-010-04	b30-100 SCREW	77	2D2-012-01	HIT AND RUN CONTROL NUT
29	2R5-135-01	BAIL TRIP SHAFT	78	2E5-036-01	CONTROL NUT RETAINER
30	2W1-199-01	015-027 WASHER	79	2B2-088-02	BODY COVER
31	2Q1-101-01	BAIL SPRING	80	2YH-277-02	HANDLE TOTAL ASSEMBLY
32	2C2-111-01	BAIL SPRING GUIDE	81	2E1-006-04	A30-130 SCREW
33	2R4-160-02	BAIL SPRING COVER	82	2C3-042-01	HANDLE SCREW SLEEVE
34	2A4-026-01	ONE-WAY CLUTCH INNER TUBE	83	2H6-001-01	HANDLE SCREW CAP
35	2F5-189-01	ROLLER CLUTCH RETAINER	84	2D4-005-03	HIT AND RUN LEVER ARM (L)
36	2Q2-016-01	SPRING	85	2C3-026-03	LEVER ARM SPACER
37	2F8-079-01	ANTI-REVERSE SPRING ANCHOR	86	2D4-006-03	HIT AND RUN LEVER ARM (R)
38	2E1-029-01	B22-090 SCREW	87	2E8-004-01	STAR WASHER
39	2YZ-017-01	ONE-WAY CLUTCH BEARING ASSEMBLY	88	2W1-127-01	027-048 WASHER
44	2F5-203-01	BEARING RETAINER	89	2E2-039-01	A26M-120 SCREW
45	2E1-068-01	F30-100 SCREW	90	2F5-318-02	REAR COVER
46	2Z1-005-05	816-5 BALL BEARING	91	2D1-052-03	HIT AND RUN CONTROL KNOB
47	2G2-041-02	PINION GEAR	92	2E0-034-04	HIT AND RUN CONTROL KNOB SCREW
48	2YB-225-02	BODY ASSEMBLY	93	2E1-010-01	b30-100 SCREW
49	2A2-034-01	ANTI-REVERSE CAM			