


BAIT CASTING REEL SNOOK SERIES SN200

Please order by parts number, not key number
 Bitte, Best.-Nr. angeben (Nicht "key"-nr.)
 Veuillez indiquer le numero de la pièce (Non "key" no.)

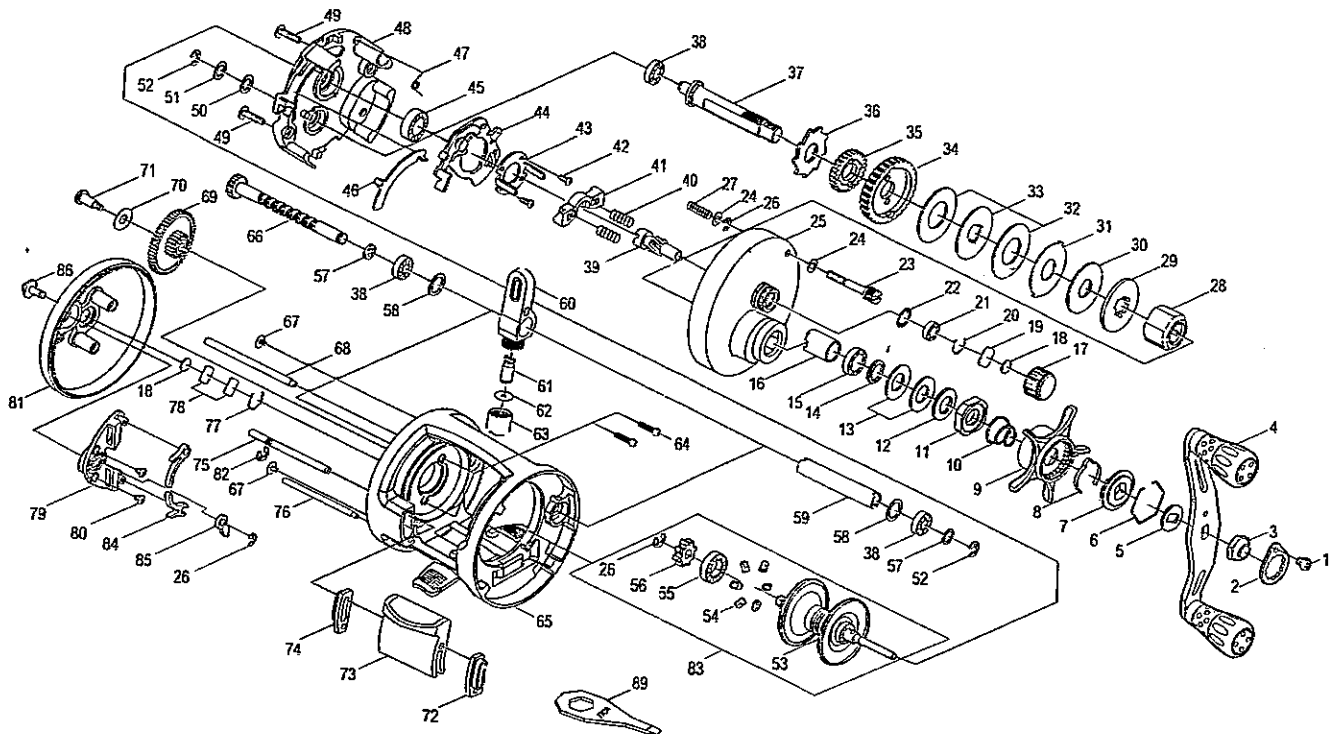

Key No.	Parts No.	Parts Name	Key No.	Parts No.	Parts Name
1	2E2-089-01	A26M-045 SCREW	45	2Z1-010-05	812-3.5 BALL BEARING
2	2F6-043-01	ROTOR NUT HOLDING PLATE	46	2M2-003-01	CLUTCH PLATE
3	2E3-075-01	HANDLE NUT	47	2Q3-086-01	RETRACTOR SPRING
4	2YH-312-04	HANDLE TOTAL ASSEMBLY	48	2F8-039-01	GEAR SETTING PLATE
5	2W2-058-01	KEY WASH	49	2E2-005-03	B26M-080 SCREW
6	2E4-018-01	RETAINER	50	2W1-054-01	052-080 WASHER
7	2F8-050-01	CLICK LEAF SPRING HOLDER	51	2W1-070-01	052-080 WASHER
8	2L3-029-01	CLICK LEAF SPRING	52	2E5-013-01	E3.0 RETAINER
9	2D4-008-05	STAR DRAG LEVER	53	2YS-083-10	SPOOL ASSEMBLY
10	2Q1-052-01	STAR DRAG SPRING	54	2C2-057-01	BRAKE COLLAR
11	2E3-029-01	STAR DRAG NUT	55	2Z1-023-01	814-4 BALL BEARING
12	2W1-020-01	081-130 WASHER	56	2F3-041-01	CLICK GEAR
13	2L1-004-01	SPRING WASHER	57	2W1-046-01	051-068 WASHER
14	2W1-035-05	080-105 WASHER	58	2W1-078-01	072-100 WASHER
15	2Z1-024-05	812-2.5 BALL BEARING	59	2C4-010-01	LEVEL WIND GUARD
16	2A4-022-01	ONE-WAY CLUTCH INNER TUBE	60	2YR-038-01	LINE GUIDE ASSEMBLY
17	2E3-024-01	CAST CONTROL NUT	61	2M5-005-01	LINE GUIDE PIN
18	2W5-026-01	SPACER	62	2W1-100-01	020-068 WASHER
19	2W5-029-01	CAST CONTROL SPACER	63	2E3-014-01	LINE GUIDE NUT
20	2E4-019-01	BEARING RETAINER	64	2E2-034-01	A20M-090 SCREW
21	2Z1-001-05	508-2.5 BALL BEARING	65	2YB-095-15	BODY ASSEMBLY
22	2E9-005-01	O RING	66	2YM-042-01	WORM SHAFT ASSEMBLY
23	2E0-011-01	RIGHT SIDE COVER SCREW	67	2E2-003-01	B26M-036 SCREW
24	2W1-132-01	036-060 WASHER	68	2P4-006-03	LEVEL WIND GUIDE
25	2YF-033-27	RIGHT SIDE COVER ASSEMBLY	69	2G3-015-01	IDLE GEAR
26	2E5-006-01	E2.5 RETAINER	70	2W1-147-02	041-100 WASHER
27	2Q1-056-01	RIGHT SIDE COVER SCREW SPRING	71	2E0-035-01	IDLE GEAR
28	2YZ-007-01	ONE-WAY CLUTCH BEARING ASSEMBLY	72	2C4-013-02	CASTING BAR GUIDE A
29	2W2-032-01	KEY WASHER	73	2YS-085-03	CASTING BAR ASSEMBLY
30	2W1-126-01	082-210 WASHER	74	2C4-014-02	CASTING BAR GUIDE B
31	2W3-017-01	EARED WASHER	75	2P2-021-01	CASTING BAR PIN
32	2W1-111-01	100-230 WASHER	76	2P4-008-03	CASTING BAR SUPPORT
33	2W2-025-01	KEY WASHER	77	2E4-011-01	BEARING RETAINER
34	2G1-027-01	DRIVE GEAR	78	2W5-015-01	CAST CONTROL SPACER
35	2YG-023-01	OSCILLATING GEAR ASSEMBLY	79	2F6-032-02	CLICK PLATE
36	2A3-027-01	RATCHET	80	2E2-022-01	B20M-030 SCREW
37	2M3-053-01	DRIVE SHAFT	81	2F5-108-18	LEFT SIDE COVER
38	2Z1-018-05	510-3 BALL BEARING	82	2E5-020-01	E1.5 RETAINER
39	2G2-010-01	PINION GEAR	83	2YT-143-10	SPOOL TOTAL ASSEMBLY
40	2Q1-031-01	YOKE SPRING	84	2F2-020-01	CLICK SPRING
41	2A2-039-01	PINION YOKE	85	2F4-018-01	CLICK PAWL
42	2E2-047-01	A20M-065 SCREW	86	2F7-004-01	CLICK SWITCH
43	2F8-030-01	CLUTCH CAM RETAINER	89	2X3-004-02	WRENCH
44	2YA-035-01	CLUTCH CAM ASSEMBLY			