




SPINNING REEL

DYNASPIN

GH5000(P-G) / GH5000(P-BL)
 GH6000(P-G) / GH6000(P-BL)

GEAR RATIO (4.4/3.3)

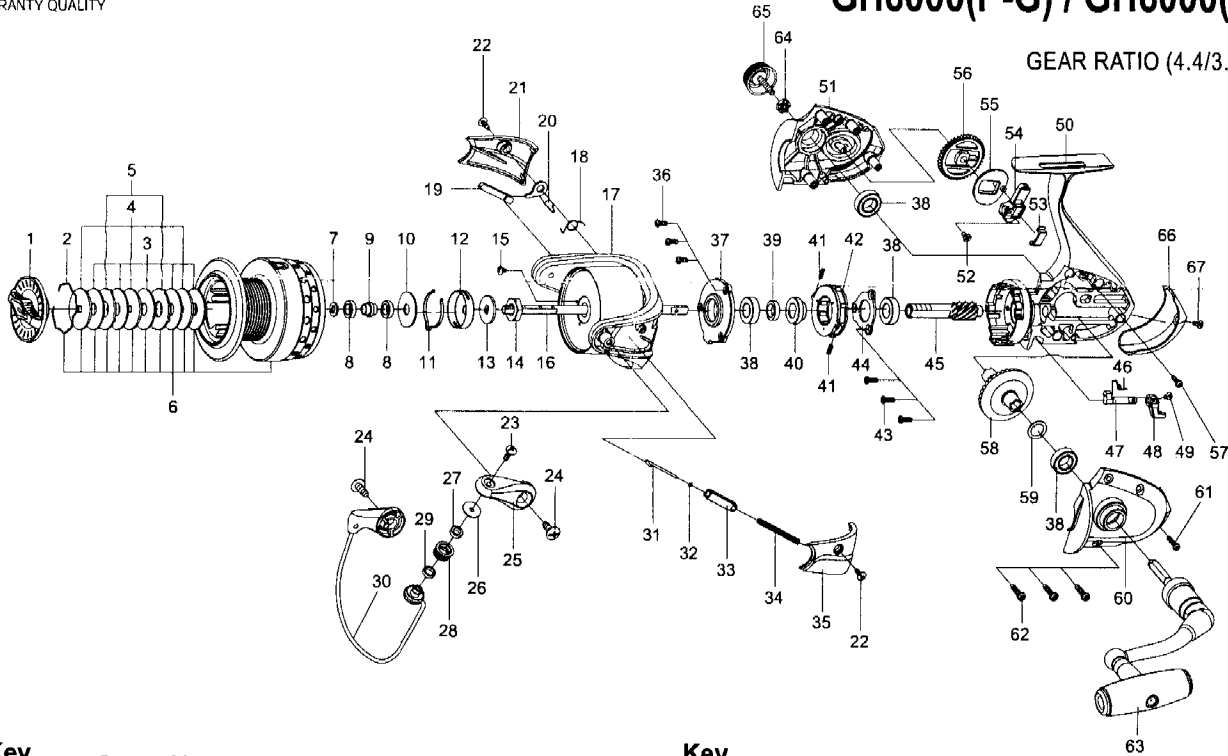

Key NO.	Parts No.	Parts name
1	2YD-097-02	DRAG KNOB ASSEMBLY
2	2E4-034-01	DRAG WASHER RETAINER
3	2W1-090-02	082-260 WASHER
4	2W2-061-01	KEY WASHER
5	2W3-031-01	EARED WASHER
6	2YT-417-02	SPOOL TOTAL ASSEMBLY
7	2W2-081-01	KEY WASHER
8	2Z1-009-05	711-3 BALL BEARING
9	2C1-121-01	SPACER
10	2W1-237-01	070-225 WASHER
11	2L3-015-01	CLICK LEAF SPRING
12	2F8-019-01	CLICK LEAF SPRING HOLDER
13	2W2-019-01	KEY WASHER
14	2E3-003-01	ROTOR NUT
15	2E1-036-01	B26-040 SCREW
16	2M3-149-01	MAIN SHAFT
17	2R1-143-02	ROTOR
18	2Q3-108-01	BAIL SPRING
19	2R5-178-01	BAIL PAWL
20	2R5-172-01	BAIL TRIP LEVER
21	2R4-197-02	BAIL TRIP COVER
22	2E1-016-02	B26-080 SCREW
23	2E2-007-01	B30M-100 SCREW
24	2E1-072-01	B40-120 SCREW
25	2R2-067-02	BAIL ARM
26	2C1-049-01	LINE ROLLER COLLAR
27	2Z1-001-05	508-2.5 BALL BEARING
28	2R6-018-01	LINE ROLLER
29	2C1-068-01	COLLAR
30	2YL-154-02	BAIL ASSEMBLY
31	2R5-186-01	BAIL TRIP SHAFT
32	2W1-199-01	015-027 WASHER
33	2C2-127-01	BAIL SPRING GUIDE
34	2Q1-127-01	BAIL SPRING
35	2R4-196-02	BAIL SPRING COVER
36	2E2-037-01	A26M-060 SCREW
37	2F8-124-01	BEARING HOLDER
38	2Z1-035-05	917-5 BALL BEARING
39	2C1-126-01	COLLAR
40	2A4-019-05	ONE-WAY CLUTCH INNER TUBE
41	2Q1-071-01	CAGE SPRING
42	2YZ-020-01	ONE-WAY CLUTCH BEARING ASSEMBLY
43	2E2-052-02	F26M-080 SCREW
44	2F5-259-01	BEARING RETAINER

Key NO.	Parts No.	Parts name
45	2G2-162-01	PINION GEAR
46	2Q3-009-01	ANTI-REVERSE SPRING
47	2A2-075-01	ANTI-REVERSE CAM
48	2A1-034-03	ANTI-REVERSE LEVER
49	2E2-013-02	B20M-060 SCREW
50	2YB-244-02	BODY ASSEMBLY
51	2B2-123-02	BODY COVER (R)
52	2E2-014-01	F26M-060 SCREW
53	2E5-062-01	OSCILLATING SLIDER RETAINER
54	2M1-073-01	OSCILLATING SLIDER
55	2M2-015-01	OSCILLATING CAM
56	2G3-093-01	OSCILLATING GEAR
57	2E1-045-01	A26-080 SCREW
58	2G1-152-01	DRIVE GEAR
59	2W1-014-01	091-130 WASHER
60	2B2-122-02	BODY COVER (L)
61	2E1-005-02	A26-120 SCREW
62	2E1-006-02	A30-130 SCREW
63	2YH-256-02	HANDLE TOTAL ASSEMBLY
64	2C3-047-01	HANDLE SCREW SLEEVE
65	2H6-021-01	HANDLE SCREW CAP
66	2F5-430-02	REAR COVER
67	2E2-055-01	B23M-050 SCREW
GH5000(P-BL)		
1	2YD-097-03	DRAG KNOB ASSEMBLY
6	2YT-417-03	SPOOL TOTAL ASSEMBLY
21	2R4-197-03	BAIL TRIP COVER
28	2R6-018-02	LINE ROLLER
30	2YL-154-03	BAIL ASSEMBLY
35	2R4-196-03	BAIL SPRING COVER
66	2F5-430-03	REAR COVER
GH6000(P-G)		
6	2YT-418-02	SPOOL TOTAL ASSEMBLY
GH6000(P-BL)		
SPECIAL PARTS		
1	2YD-097-03	DRAG KNOB ASSEMBLY
6	2YT-418-03	SPOOL TOTAL ASSEMBLY
21	2R4-197-03	BAIL TRIP COVER
28	2R6-018-02	LINE ROLLER
30	2YL-154-03	BAIL ASSEMBLY
35	2R4-196-03	BAIL SPRING COVER
66	2F5-430-03	REAR COVER
SPECIAL PARTS		
45	2G2-171-01	PINION GEAR
58	2G1-154-01	DRIVE GEAR